

# INSTRUCTIONS

## UA2 SINGLE BULB BROODER

### INSTALLATION INSTRUCTIONS

Attach rope, wire or chain to hanger on brooder and hang from ceiling. You can also attach using the enclosed clamp. Insert Infra-Red Bulb(not included) in brooder. Order Brower Model RLB (red) or Brower Model CLB (clear), both 250 watt Infra-red bulbs. Plug cord into 110 volt AC receptacle and brooder is ready for operation. Allow approximately 75 to 100 chicks per bulb.

### OPERATING INSTRUCTIONS

Height of brooder from floor can be adjusted depending upon age of chicks, brooder house and weather conditions.

**CHICKS.** Hang brooder 18 to 24 inches above floor. Brooder can be used from the time chicks are hatched up until they become five to six weeks old. Place chick guard around chicks for first two or three weeks to keep them from getting too far away from heated area and to reduce drafts.

**PIGS.** Hang brooder 24 to 36 inches above floor. Brooder can be used immediately after pigs are born and through suckling period. Helps reduce losses.

**LAMBS.** Hang brooder 42 to 54 inches above floor. Brooder helps keep new born lambs dry and warm, which gives them a healthy start.

**NOTE:** The best way to determine proper height is to watch the reaction of the brood--do not use thermometer. The chicks, pigs or lambs should be comfortable. When chicks move in and out of the heated area for feeding, exercising and sleeping, they are comfortable. Most chicks that die are likely to be found in the heated area, since unhealthy chicks do require additional heat and will naturally seek the warmest spot available.



#### **WARNING**



**Repair frayed cord. (Model UA2 should only be repaired by a qualified electrician.) Do not hang by cord. Only use hanger or clamp.**